

JVC DVD PLAYER

XV-N420B XV-N422S

INSTRUCTIONS



GNT0060-004B[EN]
0105MOC-MW-SC
©2005 Victor Company of Japan, Limited

Region code of DVD VIDEO
This player can play back DVD VIDEO discs whose region code numbers include "2."
Examples of playable DVD VIDEO discs:



The player's region code is printed on the rear of the player.
Note of Color system format
This player accommodates the PAL system, and also can play back discs recorded with NTSC system. (NTSC video signals are converted to an PAL signal and output.)

Supplied accessories
If anything is missing, consult your dealer immediately.
• Remote control (x 1)
• R6(SUM-3)/AA(15F) battery (x 2)

Warnings, Cautions and Others

IMPORTANT for the U.K.
DO NOT cut off the mains plug from this equipment. If the plug fitted is not suitable for the power points in your home or the cable is too short to reach a power point, then obtain an appropriate safety approved extension lead or consult your dealer.
BE SURE to replace the fuse only with an identical approved type, as originally fitted.
If nonetheless the mains plug is cut off ensure to remove the fuse and dispose of the plug immediately, to avoid a possible shock hazard by inadvertent connection to the mains supply. If this product is not supplied fitted with a mains plug then follow the instructions given below:

IMPORTANT.
DO NOT make any connection to the terminal which is marked with the letter E or by the safety earth symbol or coloured green or green-and-yellow.
The wires in the mains lead on this product are coloured in accordance with the following code:
Blue : Neutral
Brown : Live
As these colours may not correspond with the coloured markings identifying the terminals in your plug proceed as follows:
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

IF IN DOUBT - CONSULT A COMPETENT ELECTRICIAN.

CAUTION
To reduce the risk of electrical shocks, fire, etc.:
1. Do not remove screws, covers or cabinet.
2. Do not expose this appliance to rain or moisture.

Caution — STANDBY/ON button!
Disconnect the mains plug to shut the power off completely. The STANDBY/ON button in any position does not disconnect the mains line. The power can be remote controlled.


IMPORTANT FOR LASER PRODUCTS
1. CLASS 1 LASER PRODUCT
2. **CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit; leave all servicing to qualified service personnel.
3. **CAUTION:** Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
4. REPRODUCTION OF LABEL: CAUTION LABEL, PLACED INSIDE THE UNIT.

CAUTION: Visible and invisible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

ADVICE: Spraying water or cleaning liquid on the player may cause damage to the player. Do not use alcohol or other volatile liquids for cleaning. Do not use steam cleaning or high pressure water spray. Do not use high pressure water spray. Do not use high pressure water spray.

CAUTION:
• Do not block the ventilation openings or holes. (If the ventilation openings or holes are blocked by a newspaper or cloth, etc., the heat may not be able to get out.)
• Do not place any naked flame sources, such as lighted candles, on the apparatus.
• When discarding batteries, environmental problems must be considered and local rules or laws governing the disposal of these batteries must be followed strictly.
• Do not expose this apparatus to rain, moisture, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Caution: Proper Ventilation
To avoid risk of electric shock and fire and to protect from damage, locate the apparatus as follows:
Front: No obstructions and open spacing.
Sides: No obstructions in 3 cm from the sides.
Top: No obstructions in 5 cm from the top.
Back: No obstructions in 15 cm from the back.
Bottom: No obstructions, place on the level surface.
Spacing 15 cm or more

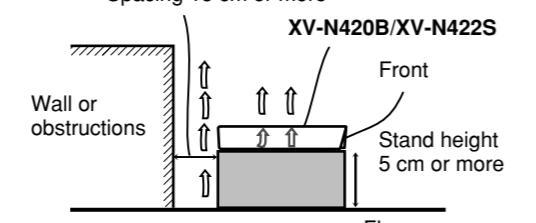

Precautions
Notes on the power cord
• When you are away on travel or otherwise for an extended period of time, remove the plug from the wall outlet. A small amount of power (1.0 W) is always consumed while the power cord is connected to the wall outlet.
• When unplugging the player from the wall outlet, always pull the plug, not the power cord.
• Do not handle the power cord with wet hands!
• Disconnect the power cord before cleaning the player or moving the player.
• Do not alter, twist or pull the power cord, or put anything heavy on it, which may cause fire, electric shock, or other accidents.
• If the cord is damaged, consult a dealer and have the power cord replaced with a new one.
Avoid moisture, water, dust, and high temperatures
• Do not place the player in moist or dusty places.
• If water gets inside the player, turn off the power and remove the plug from the wall outlet, then consult your dealer. Using the player in this state may cause a fire or electrical shock.
• Do not expose the player to direct sunlight or place it near a heating device.

Notes on installation
• Select a place which is level, dry and neither too hot nor too cold between 5°C and 35°C.
• Leave sufficient distance between the player and the TV.
• Do not install the player in a place subject to vibrations.
• Do not put heavy objects on the player.

To prevent malfunction of the player
• There are no user-serviceable parts inside. If anything goes wrong, unplug the power cord and consult your dealer.
• Do not insert any metallic objects, such as wires, hairpins, coins, etc. into the player.
• Do not block the vents. Blocking the vents may damage the player.
To clean the cabinet
• Use a soft cloth. Follow the relevant instructions on the use of chemically-coated cloths.
• Do not use benzene, thinner or other organic solvents and disinfectants. These may cause deformation or discoloring.

Playable discs

• DVD VIDEO, Audio CD, Video CD, SVCD
• DVD-R/RW written in the DVD VIDEO format
• DivX files on DVD-R/RW written in the UDF format
• CD-R/RW written in the SVCD, Video CD or Audio CD format
• CD-R/RW written in MP3/WMA/JPEG/DivX in accordance with the "ISO 9660" format

Supported Digital audio formats:
Linear PCM, MPEG Multichannel, Dolby Digital, DTS (Digital Theater Systems)*

NOTES
• If a disc gets dirty, scratched or warped, or due to the disc characteristics or recording conditions, the player may not be able to play back such discs.
• The player can play back audio signals recorded in MIX-MODE CD, CD-G, CD-EXTRA and CD TEXT.
• With some discs, operations may not be possible.
* To play back DTS-encoded DVD VIDEO or DTS-encoded Audio CD discs correctly, connect the player to an amplifier with a built-in DTS decoder. Otherwise, playback sound will be distorted.


Unplayable discs
If you try to play back discs listed below, noise may be generated and causes damage to speakers.
• DVD-RW written in the VR format
• DVD-ROM, DVD-RAM, DVD AUDIO, CD-ROM, PHOTO CD, SACD
• Unfinalized discs
• Discs of irregular shape or discs with tape, seals or paste on either the label side or playback side. Playing back these discs may damage the player.

The Non-DVD side of a "DualDisc" does not comply with the "Compact Disc Digital Audio" standard. Therefore, the use of Non-DVD side of a DualDisc on this product may not be recommended.

Connections


Before making the connections:
• Do not connect the AC power cord until all other connections have been made.
• Connect VIDEO OUT of the player directly to the video input of your TV. Connecting VIDEO OUT of the player to a TV via a VCR/an integrated TV/Video system may cause a monitor problem.

Connecting to a TV with SCART connector

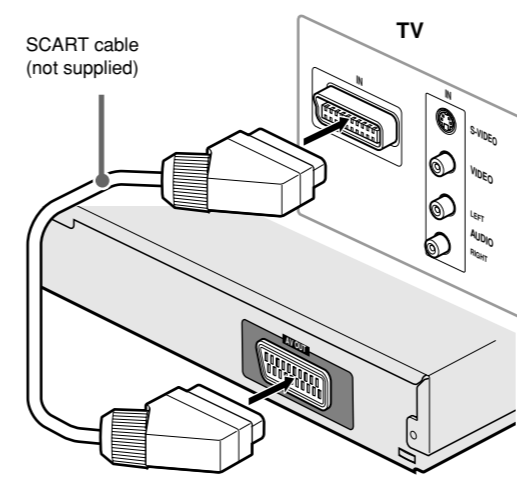


NOTE
The VIDEO jack, AV OUT terminal, and component (Y, Pb, Pr) jacks cannot be used at the same time.

Connecting to a TV with composite jacks

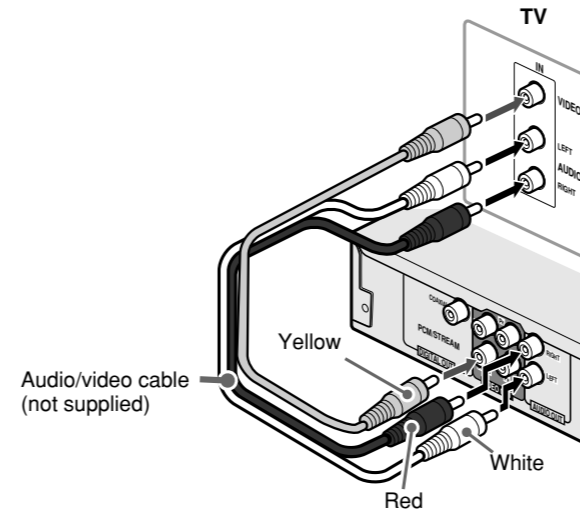


NOTES
• If your TV has a monaural audio input instead of stereo, use an optional audio cable which converts stereo audio output to monaural.
• The VIDEO jack, AV OUT terminal, and component (Y, Pb, Pr) jacks cannot be used at the same time.


Connecting to a TV with component jacks

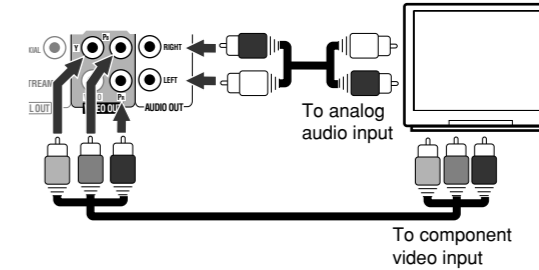

Connecting to a stereo audio amplifier (receiver)

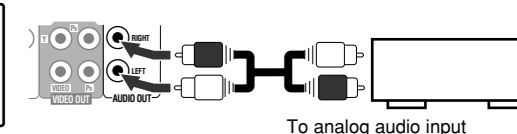

Connecting to a digital audio device
To enjoy high-quality surround sound, connect the DIGITAL OUT (COAXIAL) jack to a Dolby Digital or DTS decoder or an amplifier with a built-in decoder.

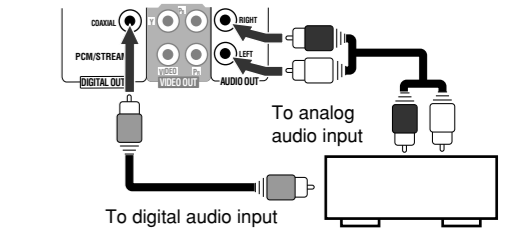

To switch the scanning mode between Progressive and Interlace, press and hold VFP-I/P on the remote control for a few seconds.

NOTES
• Connect to a TV with composite jacks and set [CONNECTIONS] to [VIDEO COMPONENT] before connecting with component jacks. (See "CONNECTIONS" in "Initial settings.")
• Connect "Y" to "Y," "Pb" to "Pb(Cb)," "Pr" to "Pr(Cr)" correctly.
• The VIDEO jack, AV OUT terminal, and component (Y, Pb, Pr) jacks cannot be used at the same time.

About the scanning mode indicator

[PICTURE SOURCE] of the PICTURE menu	Source type of DVD VIDEO	Source type of DVD VIDEO
AUTO	[DDP]	[P]
FILM	[DDP]	[DDP]
VIDEO(NORMAL)/ (ACTIVE)	[P]	[P]


NOTE
Some progressive TV and High-Definition TV sets are not fully compatible with the player. To check the compatibility of your TV, contact your local JVC customer service center.

NOTES
• Depending on the disc, no signal may be outputted from the DIGITAL OUT. Make an analog connection in this case.
• Set [DIGITAL AUDIO OUTPUT] in the [AUDIO] preference display correctly according to the connected digital audio equipment. (See "DIGITAL AUDIO OUTPUT" in "Initial settings.")

Turning on the power

Inserting the AC power plug
After all other connections have been made, insert the AC power plug to the wall outlet firmly.

Installing the batteries in the remote control
Open the compartment cover, and place the two supplied R6(SUM-3)/AA(15F) batteries in the remote control according to the polarity markings ("+" and "-") inside the compartment. Then replace the cover.

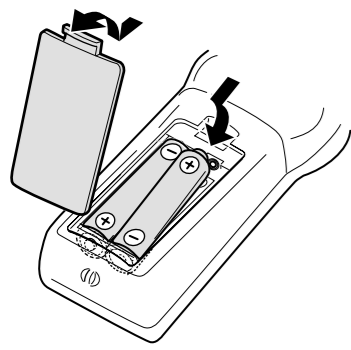

The batteries will last about six months with normal use. If the functions of the remote control become erratic, replace the batteries.

Precautions of the safe use of batteries
Observe the following precautions for the safe use of batteries. If they are used improperly their lives will be shortened, they may burst or their contents may leak.
• Remove the batteries from the remote control if it is not going to be used for a long period of time.
• Remove dead batteries and dispose of them properly.
• Never leave dead batteries lying around, take them apart, mix them with other refuse, or throw them into an incinerator.
• Never touch liquid that has leaked out of a battery.
• Do not mix new and old batteries, or batteries of different types, when placing them.

Turning on and off the player


Press STANDBY/ON.

Initial setup


When you turn on the player for the first time after purchase, the following message appears on the TV screen.

EXECUTE DVD PLAYER SETUP? - BASIC PICTURE/AUDIO SETTING
YES - PRESS ENTER NO - PRESS CANCEL

Before enjoying this player, make the initial settings as follows:
1 Press ENTER.

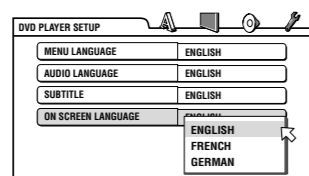


2 Press ▲/▼ to select the on-screen language for the preference displays, etc., then press ENTER.

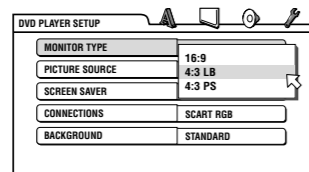

3 Press ▲/▼ to select the monitor type, then press ENTER.

- For a normal (conventional) TV, select "4:3 LB" or "4:3 PS." (See "MONITOR TYPE" in "Initial settings.")
- For a wide-screen TV, select "16:9."

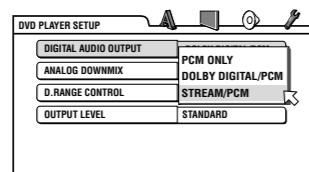


4 Press ▲/▼ to select a desired digital output signal type, then press ENTER.

- Set this item correctly according to the logo on your receiver or decoder.
(If you do not connect the player to such a device, press ENTER to finish the setting.)
- Receiver/decoder bearing Dolby Digital logo and no DTS, select "DOLBY DIGITAL/PCM."
 - Receiver/decoder bearing both Dolby Digital and DTS logos, select "STREAM/PCM."
 - Receiver/decoder bearing neither Dolby Digital nor DTS logo, or digital recorder, select "PCM ONLY."

To bring up the DVD PLAYER SETUP display later
Press SET UP for a few seconds until the DVD PLAYER SETUP display appears.

Basic Operations


Turning on and off the player

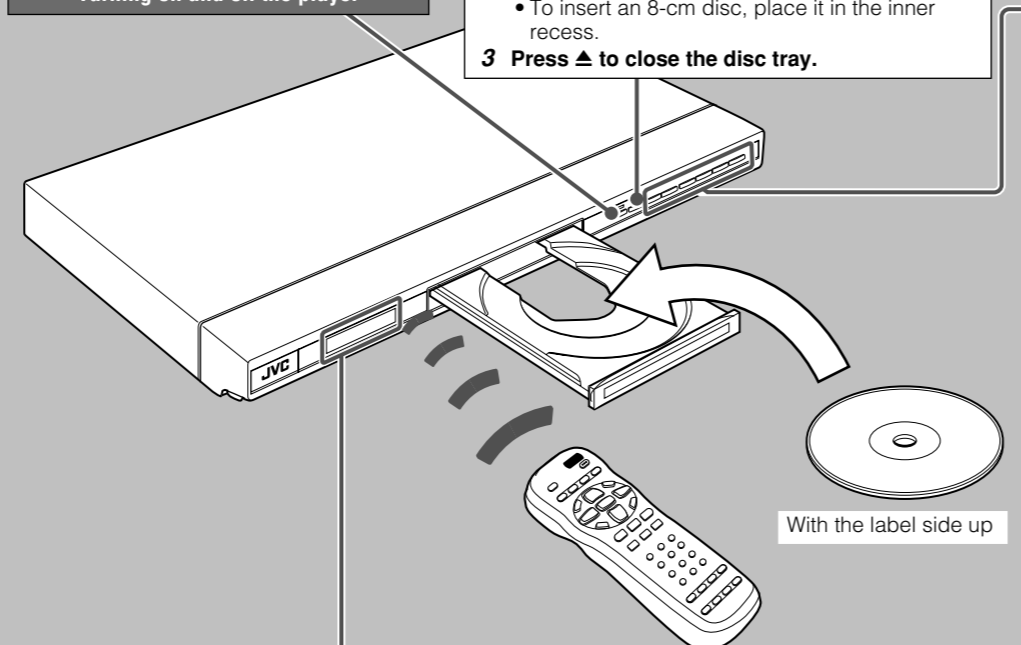

Insert a disc

- 1 Press ▲ to open the disc tray.
- 2 Place a disc in the disc tray.
• To insert an 8-cm disc, place it in the inner recess.
- 3 Press ▲ to close the disc tray.

Point toward the remote sensor directly as possible (the operating range is approx. 5 m.)

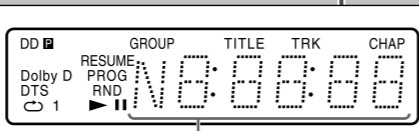

• Each indicator lights up when corresponding function/mode is activated, or corresponding information is on the main display.

About On-screen guide icons

- ▶: Playback.
 - ⏸: Pause.
 - ⏮/⏭: Slow-motion playback with the current speed.
 - ⏮/⏭: Fast forward/backward playback with the current speed.
 - 📺: At the beginning of a scene containing multi-angle views.
 - 🔊: At the beginning of a scene containing multi-audio sounds.
 - 📄: At the beginning of a scene containing multi-subtitles.
- You can change the setting so that the on-screen guide icons do not appear on the TV screen. (See "ON SCREEN GUIDE" in "Initial settings.")

Turning on and off the player

Open/close the disc tray

Basic playback

Buttons	To do
▶	Start/resume normal Playback
■	Stop • When RESUME is ON or DISC RESUME, this player memorizes the position on the disc where you interrupted playback. - To resume playback, press ▶. - To stop playback completely, press ■ again.
⏸	Pause • Each time you press the button, the playback advances to the next frame.
⏮/⏭	Fast forward/backward (While paused) Slow-motion playback • Each time you press the button, the playback speed changes.
⏮/⏭	Skip chapter/track • If you press and hold the button during playback, playback is advanced/reversed at 5 times normal speed.

VARIABLE PLAYBACK

(For DVD Video)
The disc is played back at about 1.2 or 1.5 times (FAST)/0.8 or 0.6 times (SLOW) normal speed. The sound is not muted, and the subtitle does not go off (except for DTS).
(For SVCD/VCD)
The disc is played back at about 2 times (FAST)/0.5 times (SLOW) normal speed.
(Only for DVD Video)
The playback position moves back 10 seconds before the current position (only within the same title).
▶|| on the player starts/pauses playback.

Changing the display brightness

Press DIMMER to change the brightness of the display window.

Changing the display window contents

Each time you press DISPLAY, the display window contents changes.

Locating the beginning of a scene or song

You can select a title/chapter/track directly and start playback. For DVD Video: (While stopped) select title. (While playing back) select chapter. For SVCD/VCD/CD: Select track.
To select 5: press 5.
To select 23: press 2, then 3.
To select 40: press 4, then 0.
• If you press TITLE/GROUP before entering the number, you can select the title instead of the chapter.

Using the disc menu

You can operate a disc—SVCD/VCD with Playback Control* (PBC)—using the disc menu shown on the TV screen.
* A method of controlling disc play for SVCD/VCD by using the disc menu.
■ For DVD
1 Press TOP MENU or MENU to show the disc menu.
2 Press ▲/▼/◀/▶ to select a desired item, then press ENTER or ▶ (SELECT).
• With some discs, you can also select items by entering the number using the numeric buttons.
■ For SVCD/VCD
1 While stopped, press TOP MENU or ▶ (SELECT) to show the menu.
2 Press the numeric buttons to select a desired item.
To select 5: press 5.
To select 23: press 2, then 3.
To select 40: press 4, then 0.
• To move to the next or previous page of the current menu, press ▶| or ◀|◀.
• To return to the previous menu, press RETURN.

To play back without PBC
While stopped, press the numeric buttons instead of ▶ (SELECT) to start playback.

To reactivate PBC
• Press TOP MENU or MENU.
• Press ■ to stop playback, then ▶ (SELECT).

Advanced Operations

Changing the language, sound and scene angle

1 Press the button.
2 Press the button repeatedly or ▲/▼ to select the desired item.
3 Press ENTER to finish the setting.

Buttons	To do
AUDIO	For DVD Video: select audio languages. For SVCD/VCD: select the audio channel.
SUBTITLE	select the subtitle.
ANGLE	select the view-angle.

Changing the Sound Field

Each time you press SOUND EFFECT, the Sound Effect mode changes.
• As the value becomes bigger, the Sound Effect works stronger.

Zooming the picture

Each time you press ZOOM, the magnification changes.
• You can use ▲/▼/◀/▶ button to move the zoomed position.
To return to the normal playback, select the normal size by pressing ZOOM repeatedly.

Changing the picture tone (VFP)

The VFP (Video Fine Processor) function allows you to adjust the picture character according to the type of programming, picture tone or personal preferences.
1 Press VFP-I/P.
2 Press ◀/▶ to select the desired preset.

Parameter	Selected Preset
GAMMA	MID
BRIGHTNESS	+4
CONTRAST	+3
SATURATION	+3
TINT	+3
SHARPNESS	LOW
Y DELAY	-2

To adjust the picture tone

1 Select "USER1" or "USER2."
2 Press ▲/▼ to select a parameter, then press ENTER.

Parameter	Adjustment
GAMMA	Adjust this if the neutral color is bright or dark. The brightness of dark and bright portion is maintained (LOW/MID/HIGH).
BRIGHTNESS	Adjust this if the picture is bright or dark on the whole (-16 (darkest) to +16 (brightest)).
CONTRAST	Adjust this if the far and near position is unnatural (-12 to +12).
SATURATION	Adjust this if the picture is whitish or blackish (-16 (blackest) to +16 (whitest)).
TINT	Adjust this if the appearance of flesh tone is unnatural (-16 to +16).
SHARPNESS	Adjust this if the picture is indistinct (LOW/HIGH).
Y DELAY	Adjust this if the picture looks separately/ overlapped (-2 to +2).

3 Press ▲/▼ to adjust the parameter, then press ENTER.
4 Repeat step 2 and 3 to adjust other parameters.
5 Press VFP-I/P to finish the setting.

